

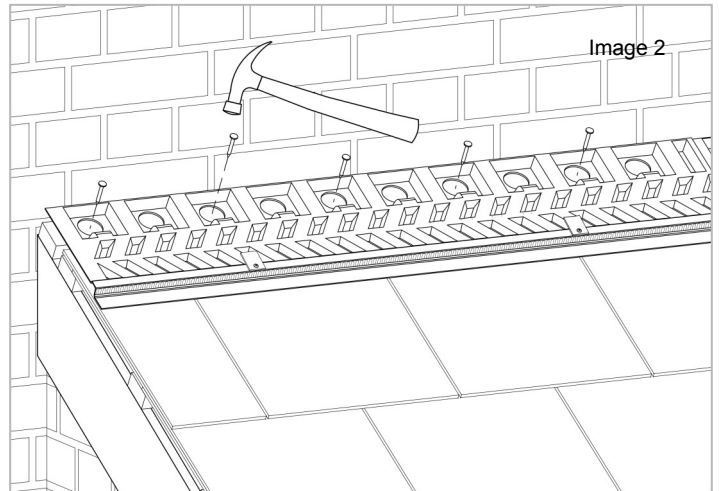
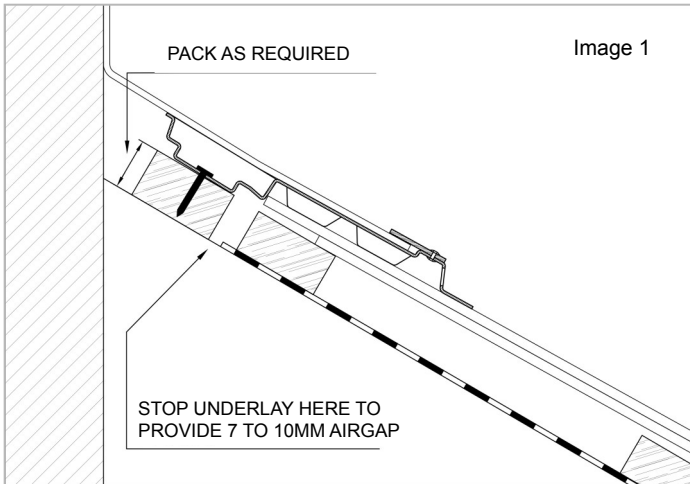


TAPCO ABUTMENT VENT FIXING INSTRUCTIONS

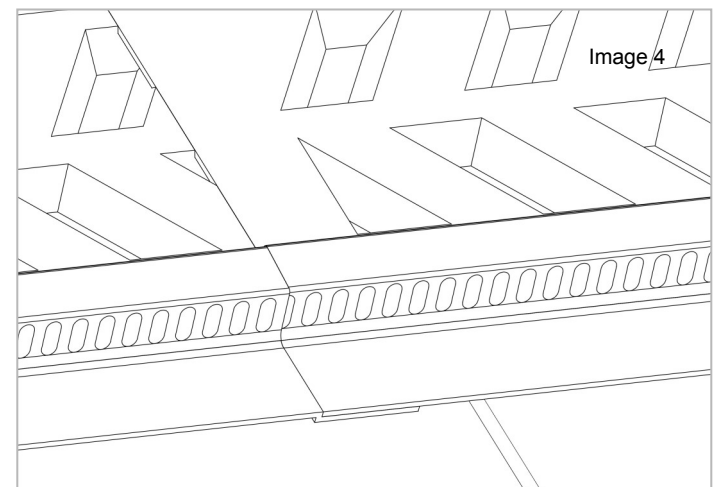

1. Prior to installation, check a suitable air gap and supporting batten for the Abutment Vent is present between the top course of tiles and wall. Depending on the tile type, additional packing may be required to support and secure the Abutment Vent.

2. Starting at the end of the roof, position the first Abutment Vent so its edge is level with the edge of the tile. Ensure the vent is parallel to the wall and the front edge of the Abutment Vent sits on the tile/slates and will accommodate the flashing illustrated in 'Image 1' shown left. Fix the Abutment Vent in place as shown using 30mm galvanised round head nails.

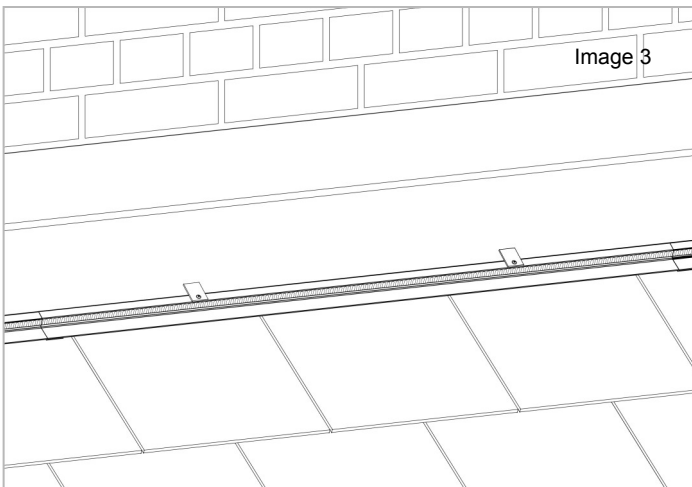

3. Ensure the slate/tiles are free from dust and remove the protection strip from the butyl strip to the underside of the front edge of the Abutment Vent and adhere the front edge to the slate/tile.

4. Moving left to right, fit the subsequent Abutment Vent by butting it to the fitted vent and repeating the fitting sequence until the full top abutment of the roof is completed. The last Abutment Vent will most likely need to be cut to ensure it finishes flush with the edge of the tiles.

5. Bring down the flashing from the wall on to the top face of the Abutment Vent, terminating it behind the ridge of the forming above the ventilation grille. Tuck the flashing behind the pre-fitted clips to help prevent the lead lifting. Ensure the wall flashing covers the open ends of the vent to prevent insect and weather ingress.

THIS VENT IS SUITABLE FOR ROOF PITCHES OF 20° AND ABOVE. IF REQUIRED BELOW THIS PITCH, PLEASE CONTACT OUR TECHNICAL SERVICES DEPARTMENT