


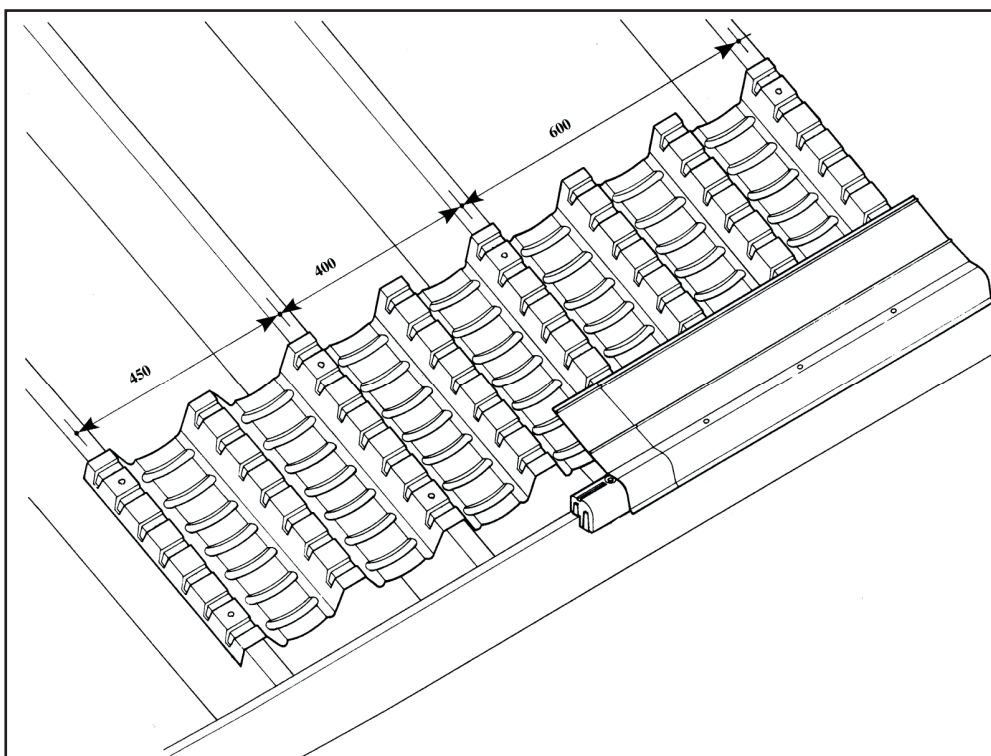

FIXING INSTRUCTIONS

RAFTER ROLL VENTILATOR

1. Attach one piece of the Roll Ventilator by placing the end square corrugation over the rafter and fixing with staples or nails.
2. The ventilator should be placed to ensure the airflow from the soffit area is not restricted by the roof insulation.
3. By lightly stretching the roll along its length, the square corrugations will fall into line automatically with rafters at 400mm and 600mm centres and can easily be extended to suit 450mm centres.
4. Fix at each rafter, at the top and bottom of the ventilator roll. To maintain a continuous panel, adjoining strips are overlapped at the rafter position.
5. The roof insulation should extend under the panel to the top of the cavity.



FOR FURTHER INFORMATION ON ALL TAPCO PRODUCTS PLEASE CONTACT:



Unit 32, Tokenspire Business Park, Hull Road, Woodmansey, Beverley, East Yorkshire, HU17 0TB
Tel: +44 (0)1482 880478 | Fax: +44 (0)1482 880678 | info@tapcoslate.com | www.tapcoroofingproducts.com